




# Bose SoundTouch Portable Motherboard Replacement

Replace the motherboard on your Bose SoundTouch Portable.

Written By: Chelsea Martin

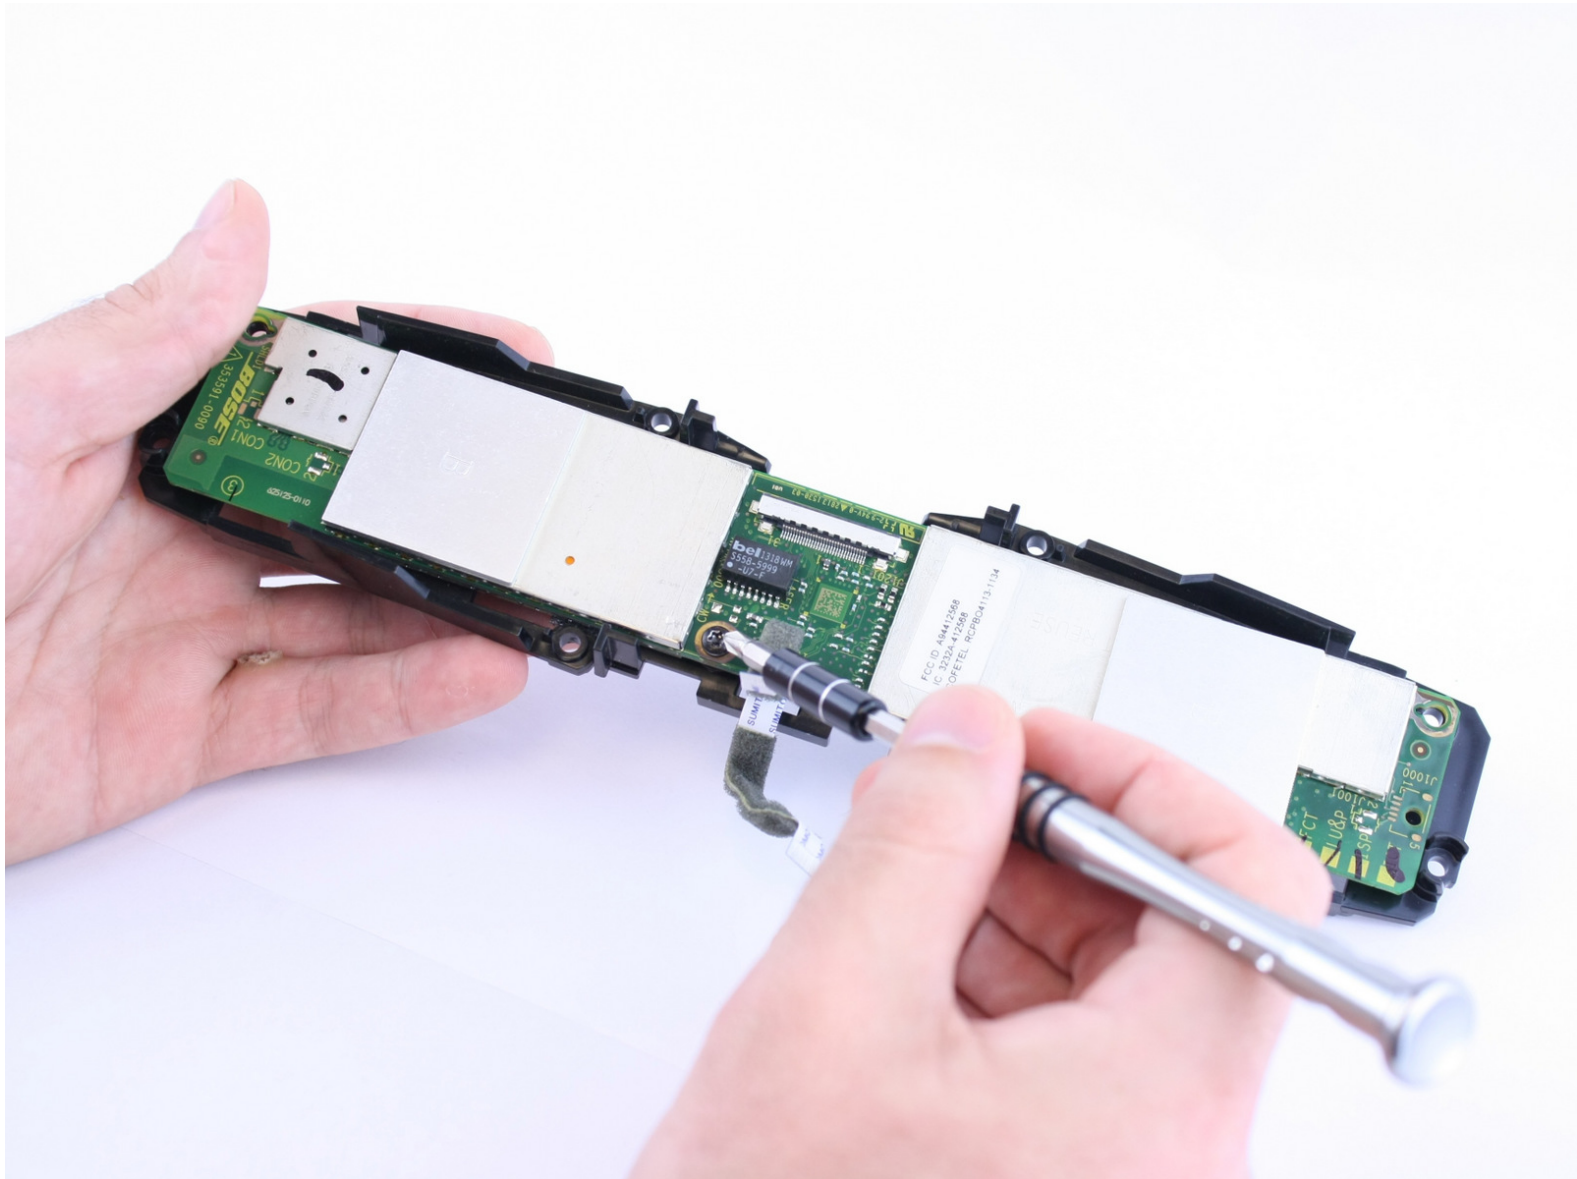



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Small Needle Nose Pliers](#) (1)
  - [T10 Torx Screwdriver](#) (1)
-

## Step 1 — Speaker Battery



- Remove the two T-10 machine screws at the bottom of the device.

## Step 2



- Turn the device around.
- From the top, lightly push down the back cover to release it.
- Lift the bottom of the cover and pull it up.

## Step 3



- Remove the two T-10 machine screws, then pull the battery straight out.


## Step 4 — Metal Trim



- Remove the two screws using a torx screwdriver.





## Step 5

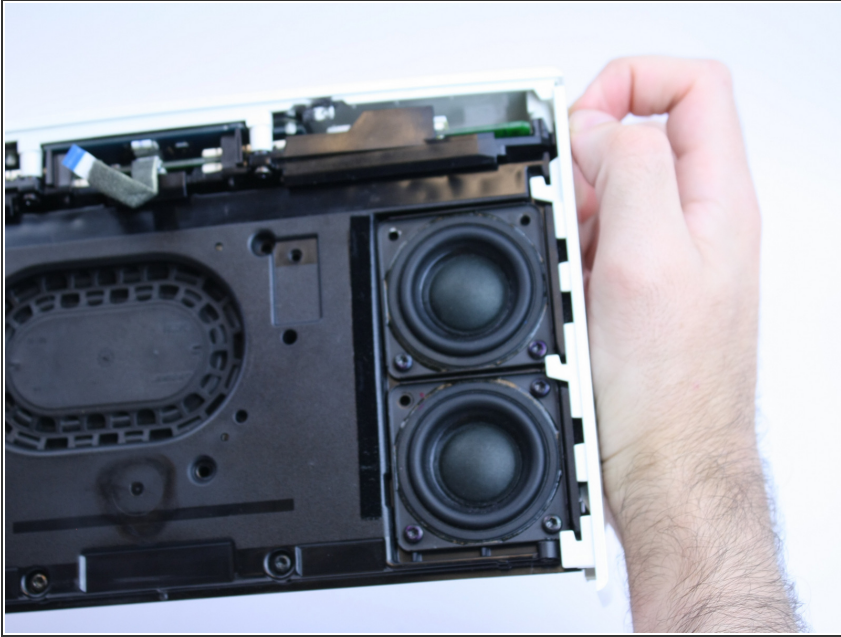


- With the bottom of the device facing you, pull down the trim pieces to remove from the device body.

## Step 6 — Motherboard

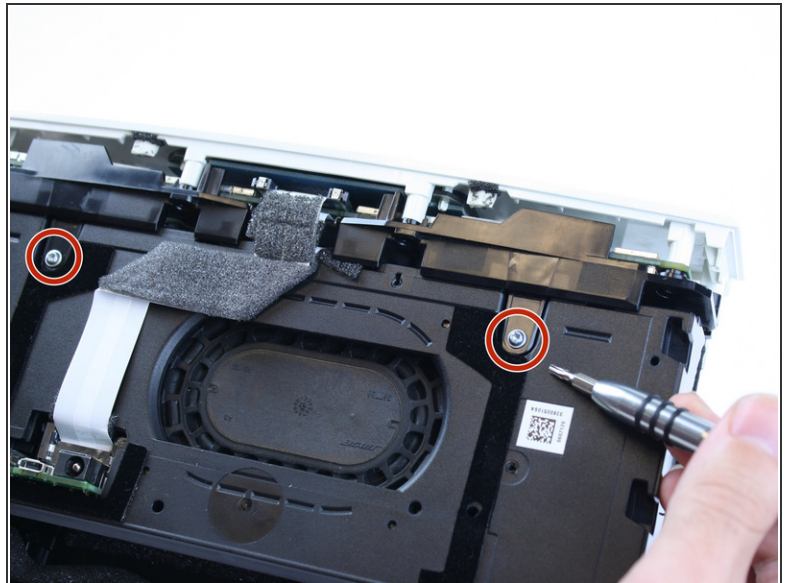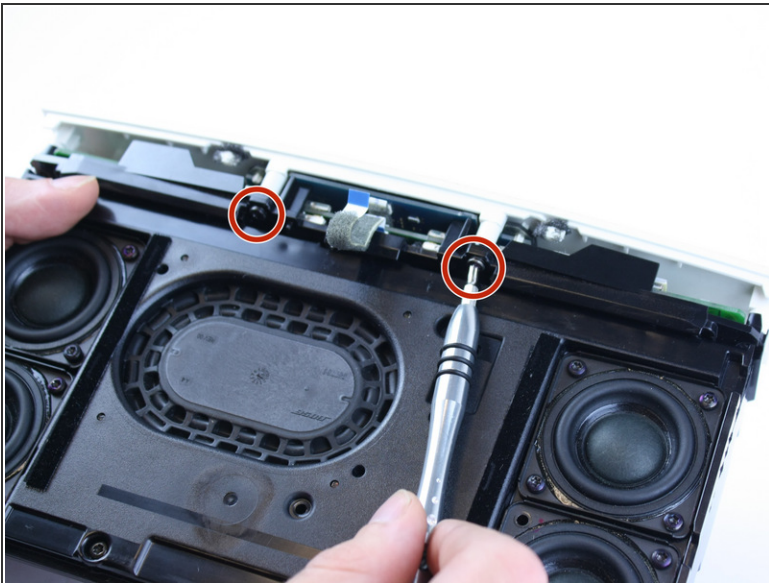


- Remove four T-10 Torx screws; there are two on the front and two on the back.

## Step 7

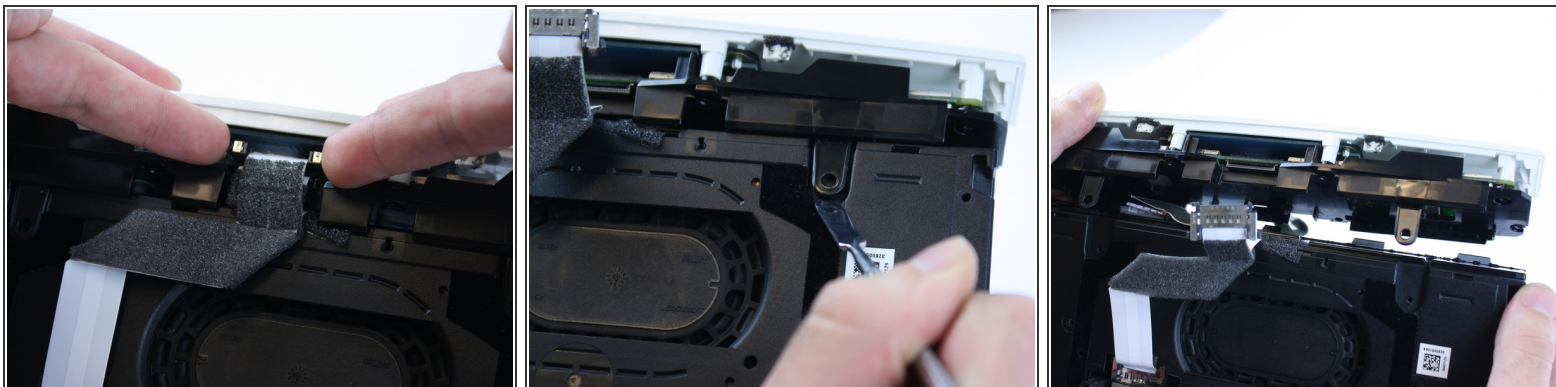

- Pinch and remove the connectors.
- Use a flat tool to pry off the top piece.

## Step 8

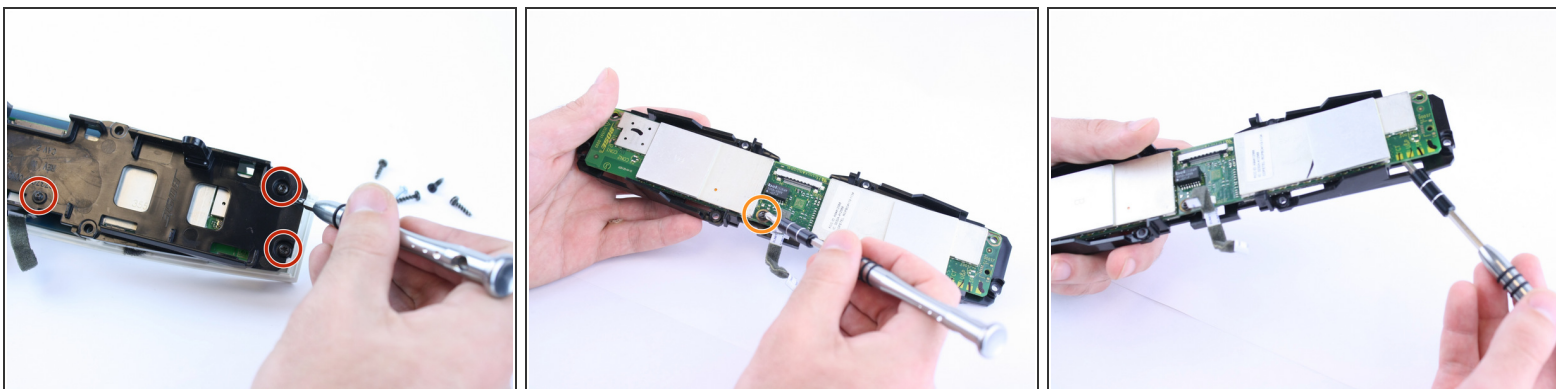

- Remove the four T-10 Torx screws holding the plastic cover in place.
- Remove the one T-10 Torx screw that is holding the motherboard in place.
- Pry off the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-19 06:40:42 PM.